 


SETUP GUIDE

SmartGift WordClock

Connect to Wi-Fi step by step

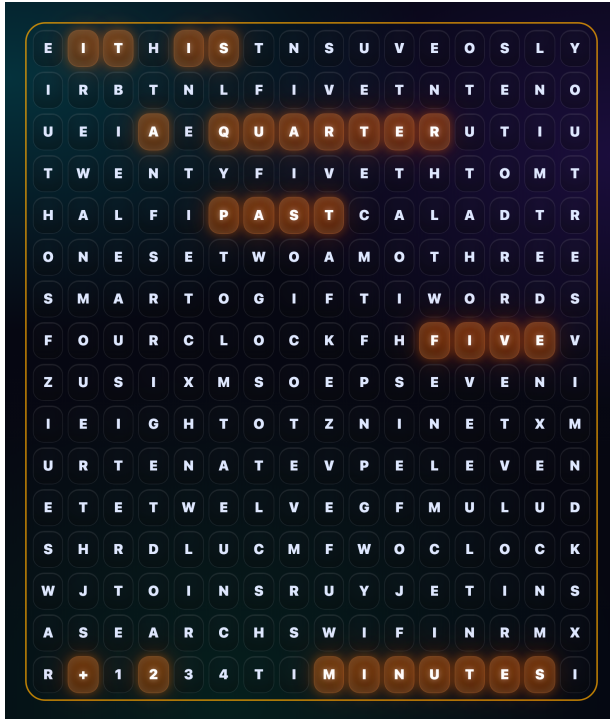

Follow the steps in order. Scan the QR code for the latest instructions and support.




Latest documentation & support

Step 1 • Power on your WordClock

Estimated time: 30 seconds

Place the WordClock where you want to use it and connect the power supply. During startup, SMART, GIFT, WORD and CLOCK light up in rainbow colors.

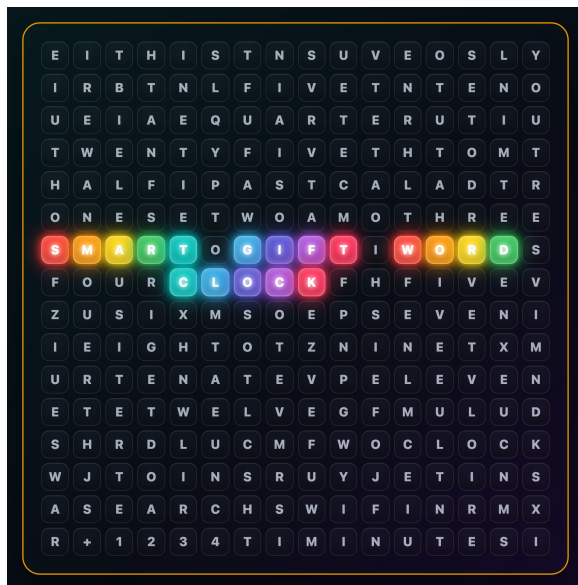

Steps

- Connect the USB cable to the WordClock.
- Plug the power adapter into a wall outlet.
- Wait for the colorful SMART • GIFT • WORD • CLOCK startup sequence.
- Then wait until the setup Wi-Fi network becomes available.

Tip On first startup, it may take a few seconds for the setup network to appear.

Step 2 · Connect to Wordclock-Setup

Estimated time: 1 minute

Open the Wi-Fi settings on your phone, tablet or computer and connect to the WordClock setup network.

Setup Wi-Fi access

- 1 Wi-Fi network: Wordclock-Setup
- 2 Password: 12345678
- 3 Select the network and connect

Steps

- Open Wi-Fi in your device settings.
- Select the network “Wordclock-Setup”.
- Enter “12345678” as the password.
- Confirm the connection.


Important A “No Internet Connection” message is normal at this stage. Stay connected to Wordclock-Setup.

Tip For normal home Wi-Fi setup, the setup network is used only during configuration. If you choose “Use without Wi-Fi”, Wordclock-Setup remains active for local access.

Step 3 · Open the setup page

Estimated time: 30 seconds

The WordClock now provides a small setup page used only to enter your home Wi-Fi details.

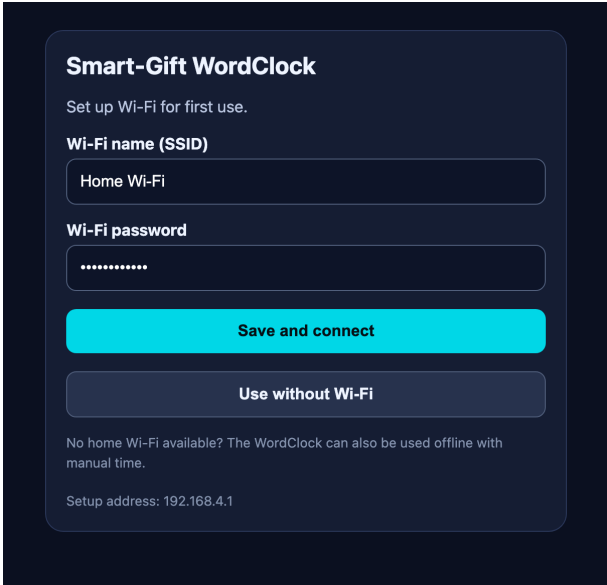The image shows a dark-themed setup page for the Smart-Gift WordClock. At the top, it says "Smart-Gift WordClock" and "Set up Wi-Fi for first use." Below this are two input fields: "Wi-Fi name (SSID)" with the text "Home Wi-Fi" and "Wi-Fi password" with a masked password "*****". There are two buttons: a red "Save and connect" button and a grey "Use without Wi-Fi" button. At the bottom, it says "No home Wi-Fi available? The WordClock can also be used offline with manual time." and "Setup address: 192.168.4.1".

Smart-Gift WordClock

Set up Wi-Fi for first use.

Wi-Fi name (SSID)

Home Wi-Fi

Wi-Fi password

Save and connect

Use without Wi-Fi

No home Wi-Fi available? The WordClock can also be used offline with manual time.

Setup address: 192.168.4.1

Browser address <http://192.168.4.1>

Steps

- If the setup page opens automatically, continue there.
- Otherwise open Safari, Chrome or another browser.
- Enter <http://192.168.4.1> directly in the browser address bar.

Important Enter the address directly in the browser address bar, not in a search engine.

Tip The page is provided locally by the WordClock and does not require internet access.

Step 4 · Connect the WordClock to your home Wi-Fi

Estimated time: 1 minute

Enter the Wi-Fi name and password of your normal home network and let the WordClock establish the connection.

Smart-Gift WordClock

Set up Wi-Fi for first use.

Wi-Fi name (SSID)

Home Wi-Fi

Wi-Fi password

.....

Save and connect

Use without Wi-Fi

No home Wi-Fi available? The WordClock can also be used offline with manual time.

Setup address: 192.168.4.1

Steps

- Enter the name of your home Wi-Fi network (SSID).
- Enter the Wi-Fi password carefully.
- Tap “Save and connect”.
- Wait until “Wi-Fi connected” and the new web address are shown.


Important Wi-Fi passwords are case-sensitive.

Tip If no home Wi-Fi is available, choose “Use without Wi-Fi” instead. The WordClock then remains accessible through its own setup network.

Step 5 · Use the WordClock without Wi-Fi

Estimated time: 1 minute

The WordClock can also be operated without a home Wi-Fi network. Its own setup network remains active and the time is set manually.

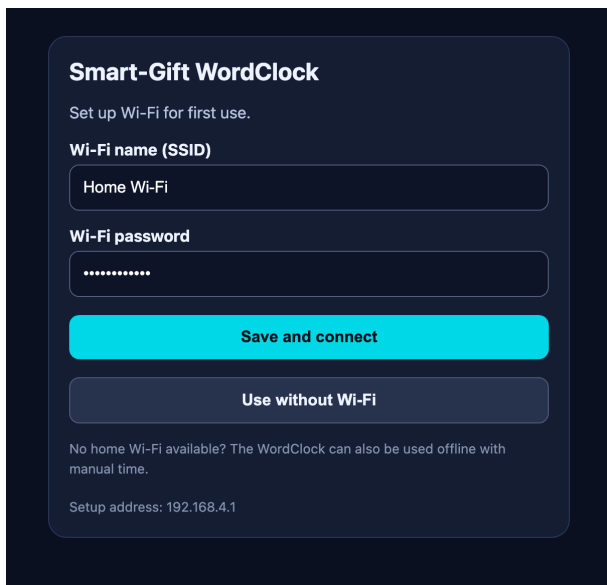The image shows a dark-themed setup screen for the 'Smart-Gift WordClock'. At the top, it says 'Smart-Gift WordClock' in white. Below that, it says 'Set up Wi-Fi for first use.' There are two input fields: 'Wi-Fi name (SSID)' with 'Home Wi-Fi' entered, and 'Wi-Fi password' with a masked password '.....'. Below these fields are two buttons: a red 'Save and connect' button and a grey 'Use without Wi-Fi' button. At the bottom, there is a note: 'No home Wi-Fi available? The WordClock can also be used offline with manual time.' and the 'Setup address: 192.168.4.1'.

Steps

- Connect to “Wordclock-Setup” and open <http://192.168.4.1>.
- Tap “Use without Wi-Fi”.
- Open the web interface via <http://192.168.4.1>.
- Select “Manual” as the time source, set the current time and tap “Set today”.


Important Without an Internet connection, the WordClock cannot synchronize the time automatically via NTP. After a power interruption, the time may need to be set manually again.

Tip Colors, brightness, night mode and other local settings can still be changed without home Wi-Fi.

Step 6 • Return to your home Wi-Fi and open the WordClock

Estimated time: 1 minute

After a successful connection, the setup page shows the new web address and tells you how to continue.

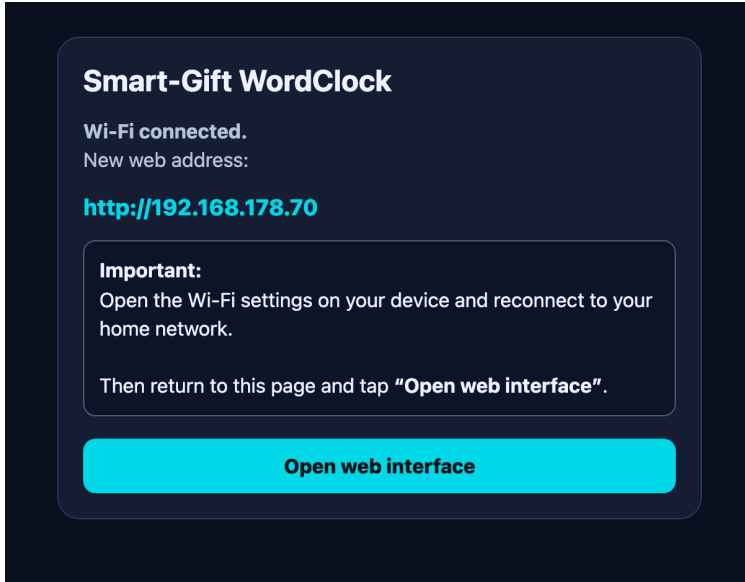

Steps

- Open the Wi-Fi settings of your device.
- Reconnect the device to your normal home Wi-Fi.
- Return to the setup page.
- Tap "Open web interface".

Important The new WordClock address works only after your phone, tablet or computer is back on the same home Wi-Fi.

Tip The new address is shown directly on the setup page, so you do not need to search for the WordClock in your router.

Step 7 · Open your WordClock later

Estimated time: 30 seconds

After setup, you can reach the WordClock settings at any time through your home Wi-Fi.

Open your WordClock later

<http://192.168.178.70>

- 1 Use the same home Wi-Fi
- 2 Open the device address in a browser
- 3 Save as a Home Screen shortcut





SmartGift
WordClock

Steps

- Connect your phone or tablet to the same home Wi-Fi as the WordClock.
- Open the web address shown during setup, for example <http://192.168.178.70>.
- For easier access, save the page as a Home Screen shortcut.

Important The setup address <http://192.168.4.1> is only for the setup network. In your home Wi-Fi, use the new device address shown after connection.


Tip Save the device address after setup or create the Home Screen shortcut immediately.

Step 8 · Add a Home Screen shortcut

Estimated time: 1 minute

This lets you open your WordClock settings with one tap, just like an app.

Add a Home Screen shortcut

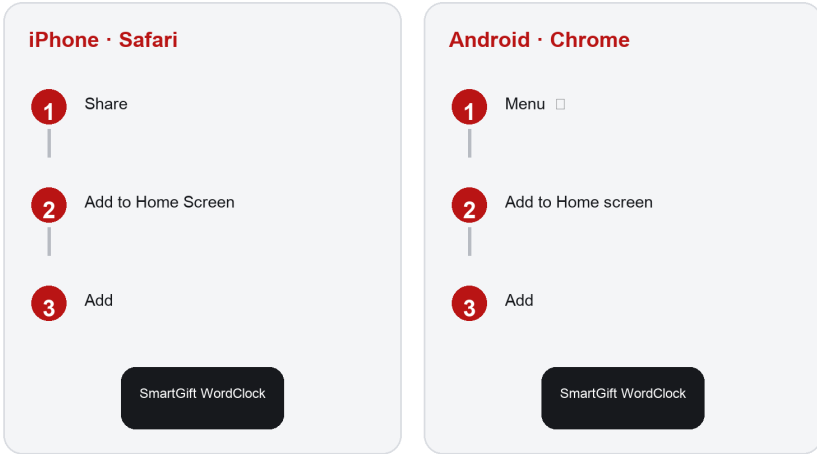

Steps

- iPhone: Open the page in Safari, tap Share, choose “Add to Home Screen”, then tap “Add”.
- Android: Open the page in Chrome, tap the : menu, choose “Add to Home screen” or “Install app”.
- A “SmartGift WordClock” icon will then appear on your Home Screen.


Tip Your phone must be connected to the same home Wi-Fi as the WordClock.

Done Done: Your WordClock settings are now available with one tap.

Step 9 • If the connection does not work

Estimated time: 2 minutes

These steps solve the most common setup problems.

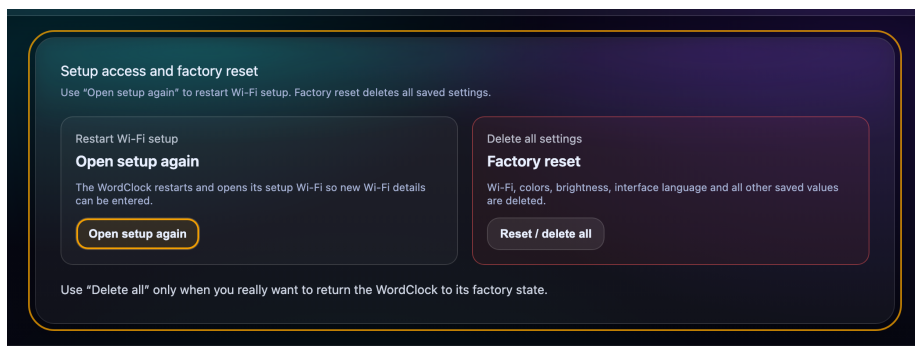

Steps

- Check the Wi-Fi name and password.
- Try placing the WordClock closer to your Wi-Fi router.
- Use "Open setup again" and enter the Wi-Fi details again.
- Use factory reset only when a complete new setup is required.


Important Factory reset deletes all saved Wi-Fi and device settings.

Tip For further assistance, contact kontakt@smart-gift.de.

Step 10 · Setup complete

Estimated time: —

Your SmartGift WordClock is now set up and ready to use.

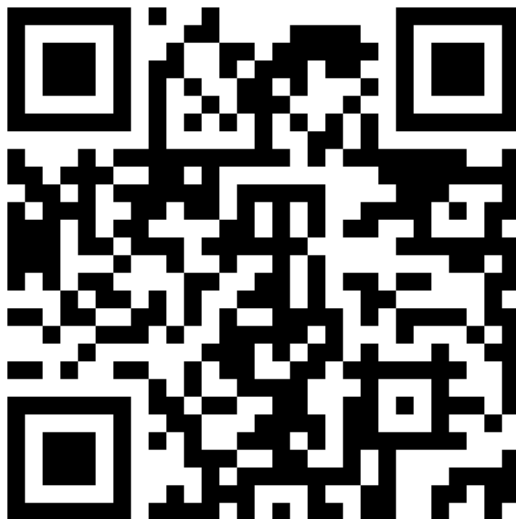

Latest documentation & support

Steps

- Latest instructions and support: www.smart-gift.de/support
- Support: kontakt@smart-gift.de

Tip Scan the QR code for the latest instructions and support.

Done With Wi-Fi, the WordClock automatically synchronizes the time and daylight-saving changes. In offline mode, use manual time setting.

Document 1.4 · Firmware INT 5.0.11 · Publisher 7.2.3 · 2026-08-06